

How to Program Remote Control for Use in a Single Classroom or in Multiple Classrooms

Step 1

Determine how many classrooms will operate using the Remote Control.

Step 2

Use the “Remote Control Frequency Chart” to select one frequency # to assign to each classroom.

Example 1 - for a single classroom, select one frequency # (eg. F1)

Example 2 - for multiple classrooms, select a unique frequency # for each classroom

eg. classroom A will use frequency # F1

classroom B will use frequency # F2

classroom C will use frequency # F3

***Important!** - Do not assign the same frequency # for use in more than one classroom.*

Use the chart to record the classroom name beside the frequency # selected.

Remote Control Handset



Step 3


For each classroom, use a different Remote Control Handset. Identify each Handset with the classroom name.

Step 4

Open the battery compartment on the back side of the Handset.

Step 5


Program the Handset frequency using the Switch Setting shown in the Remote Control Frequency Chart. Each frequency has a unique setting of 8 switches. Use a pen to move the switches in the Handset to the proper position to correspond to the switch setting illustration.

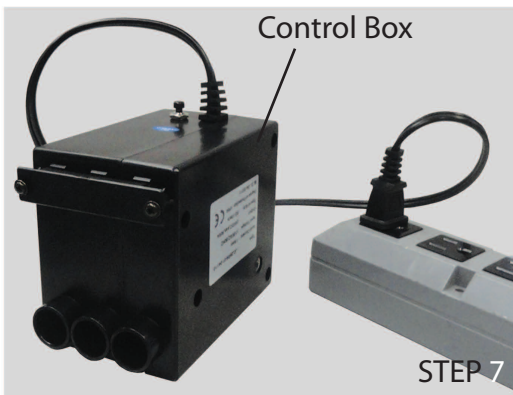

- Step 6**
For each classroom, gather together the required quantity of Control Boxes.

- Step 7**
Select one of the Control Boxes and plug the power cord into a power outlet.

- Step 8**
Locate the Memory button on the top of the Control Box.

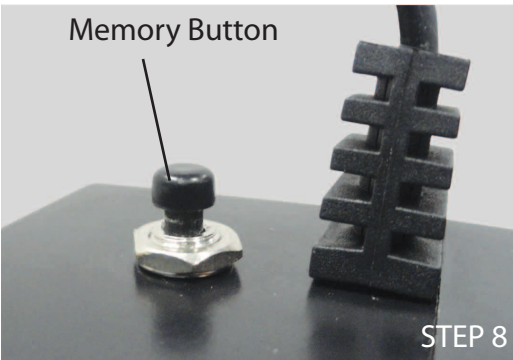












- Step 9**
Program the Control Box frequency by pressing the UP button on the Handset at the same time as you press down the Memory button on the Control Box. Hold both buttons down for 5 seconds and then release. Unplug the Control Box from the power outlet.



- Step 10**
The Handset and the Control Box are now synchronized to the same frequency#. Repeat Steps 7, 8, 9 for the remaining Control Boxes required for that particular classroom.

Remote Control Frequency Chart

Frequency #	Switch Setting	Classroom Name
F1	Switch #8 up 
F2	Switch #7 up 
F3	Switch #7 & 8 up 
F4	Switch #6 up 
F5	Switch #6 & 8 up 
F6	Switch #6 & 7 up 
F7	Switch #5 up 
F8	Switch #5 & 8 up 
F9	Switch #5 & 7 up 
F10	Switch #5 & 6 up 
F11	Switch #4 up 

For more frequency configurations please contact ISE Customer Service