



Removing the Control Box

Troubleshooting Manual

1. Identify the control box attached to the front modesty panel (located above the 3" grommet hole and mounted on a 3" x 4" plastic mounting plate). See picture 1.1
2. Press the release hook on the bottom of the mounting plate and push up the actuator until it slides off the mounting plate. See picture 1.2 and 1.3



Picture 1.1



Picture 1.2



Picture 1.3