



How to Reverse the Direction of the Power Track (Refer to illustration attached)

- Step 1** Lift off the metal front modesty cover from the wood front modesty panel.
- Step 2** Detach the front modesty panel from the metal desk frame. This is done by accessing the interior of the desk through the cut-out in the front modesty panel. Remove the eight Phillips head wood screws (two screws in each of four metal corner brackets) that attach the front modesty panel to the metal frame. Retain the screws.
- Step 3** With the front modesty panel removed, the power track with metal sheathed cable will be accessible. Note the direction of the cable. Remove the power track from the black plastic power trough by sliding the track off of the trough (the track is held in place by a tongue and groove fit).
- Step 4** Reverse the direction of the power track by pointing the track and cable in the opposite direction. Re-install the power track to the power trough.
- Step 5** Re-attach the front modesty panel to the metal frame. Re-install the front modesty cover on to the front modesty panel (reverse of step 2 and step 1).

