



Shift E5 Actuator Electric

Troubleshooting Manual

1. Ensure table is positioned in its final location, and all parts are firmly connected (one end of power cable to control box (A) and the other end of power cable to wall outlet (B), actuator motor cables to connect cables (C) to control box (D), and switch to control box (E))
2. Make sure power cable is connected to an active wall outlet
3. Initialize table by holding the 'down' key on the switch until it runs into end stop. It will then automatically run approx. 5mm out again hereafter slowly run in again. Only release the down key when movement has completely stopped! Now table has been activated
4. If there is no movement, unplug power cable from wall outlet, re-plug and repeat steps 1-3
5. If there still isn't any movement, locate another similar table to test each part
6. Remove the switch from the control box from the other table that works, and connect to the table that doesn't work. Repeat steps 1-3
7. If the table still doesn't work, then the switch is not the problem
8. Remove the connect cables from the table that works and replace onto the table that doesn't work. Repeat steps 1-3
9. If the table still doesn't work, then the connect cables are not the problem
10. Remove the control box from the table that works and replace onto the table that doesn't work. Repeat steps 1-3
11. If the table still doesn't work then the control box isn't the problem. Please contact ISE Customer Service (800-463-7731) to replace the table

Parts List and Diagram

