


VE-CPUST Installation Instructions

STEP 1: Mount track to underside of work surface (Figure 1)

Figure 1

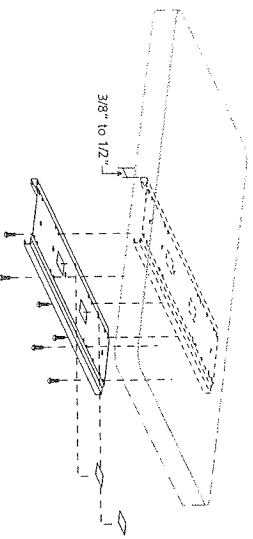


- A) Peel film from adhesive tape on back of track to help hold it in position on the underside of the worksurface during installation (Leader™ SuperGlide arms only).

NOTE: The adhesive tape provides a temporary attachment. **DO NOT USE FOR PERMANENT ATTACHMENT.**

- B) With open end facing front of surface, position track 3/8" to 1/2" back from front edge of work surface.
- C) Install using (6) six #10 x 3/4" phillips wood screws for wood surfaces (provided).
- D) Do not use the first (2) two holes closest to the open end of the track. These holes are for the track stops.

STEP 2: CPU Installation (Figure 2)


Figure 2

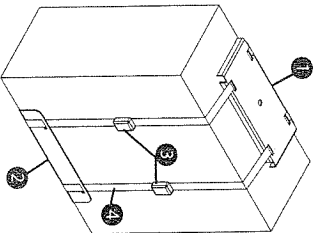

- E) Place the CPU into the holder and ensure the top of the holder (1) is on the top of the CPU and that the bracket (2) is on the bottom of the CPU.
- F) Ensure the straps (4) are not twisted then connect the buckles (3) and tighten the straps.
- G) The CPU in the holder should resemble Figure 2.
- H) Place the holder into the track and check for slack between the top of the holder (1) and the CPU. If necessary, remove the CPU holder from the track and tighten straps.

STEP 3: Install Track Stop (Figure 3)

Figure 3

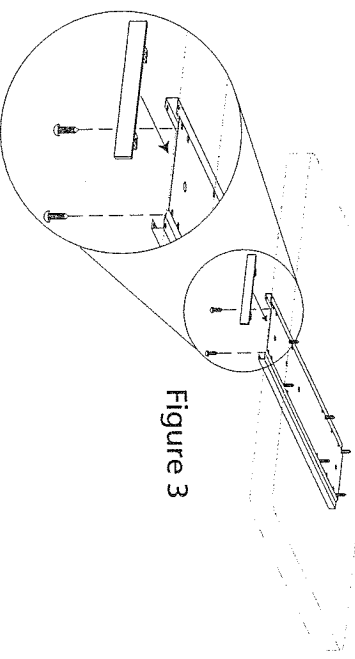

- I) Attach the front track stop (provided) into (2) two holes at front of track with (2) two remaining screws.