


MA-6-G Monitor Arm

COMPLETED ASSEMBLY

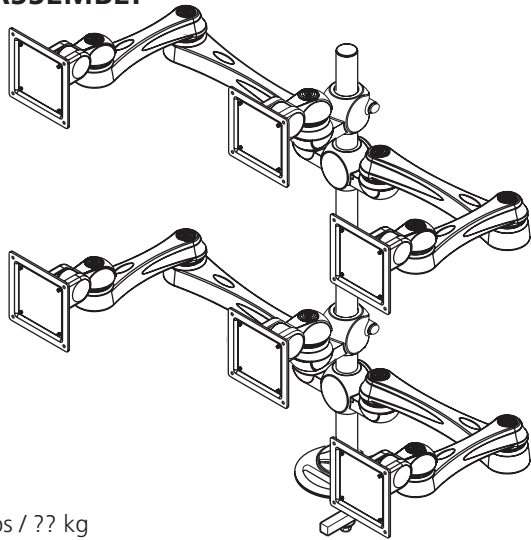


Loading up to ??? lbs / ?? kg

STEP 1 Join the Arm Components Together

Use the hardware supplied to attach together the following components:


- LA-511 Vesa (6)
- LA-512 Short Arm (4)
- LA-513 Long Arm (4)
- LA-514 Connector (2)

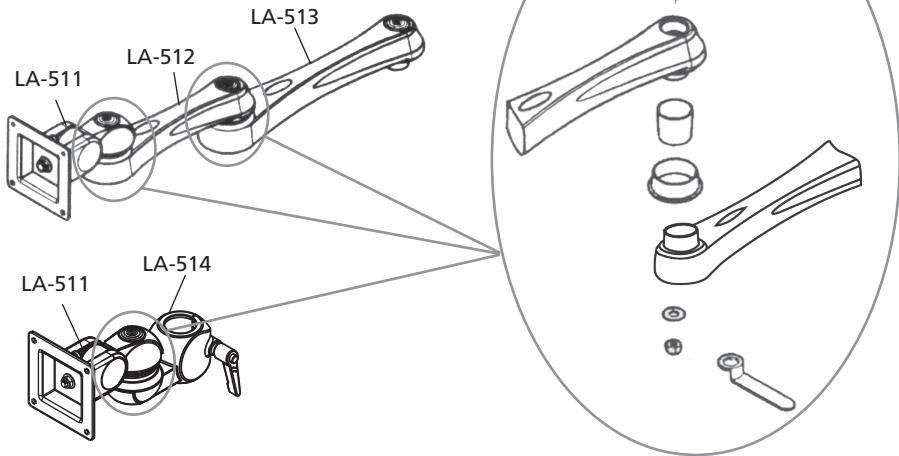

Assembly Guide

STEP 2 Mount the Grommet to the Worksurface


Use the hardware supplied to attach the LA-502A grommet to the work-surface. Then attach the LA-501A pole to the LA-502A grommet.

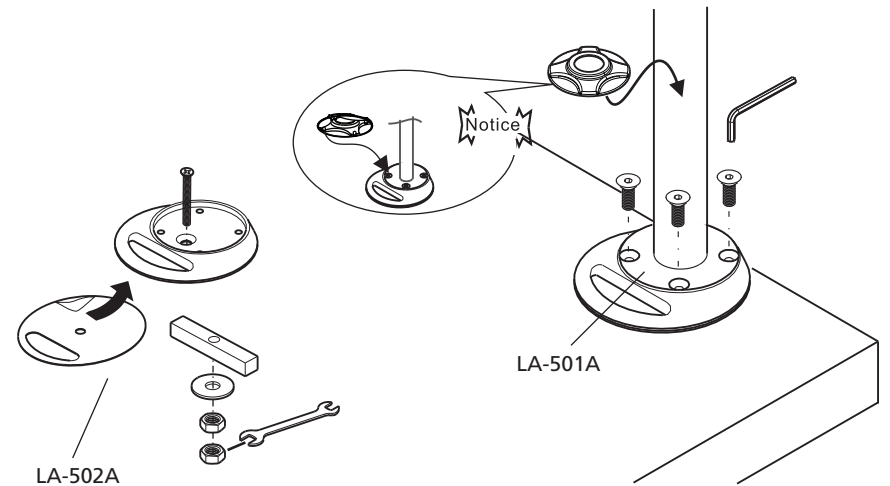


STEP 3 Mount the Monitor Arm to the Monitor

Place monitor face down on a flat surface. Place LA-511 Vesa on the back of the monitor and secure with screws supplied.

75mmx75mm VESA interface.

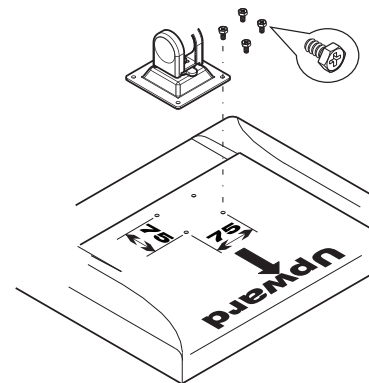


100mmx100mm VESA interface.

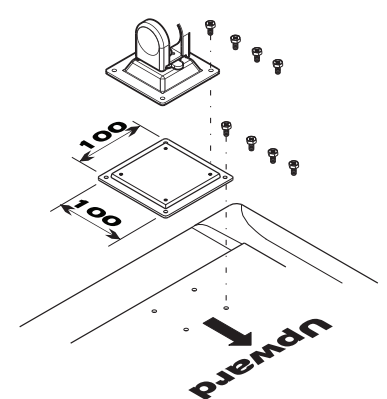

Assembly Guide


STEP 4

Loosen the two screws slightly on the LA-515 double connector. Place the connector on the pole at the desired viewing height. Tighten up the screws.

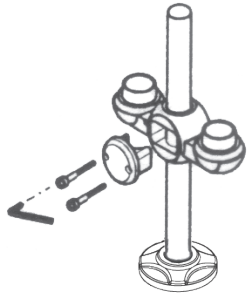


STEP 5

Carefully support the monitor and place one long arm on the connector and then secure using the hardware supplied. Repeat for the other long arm.

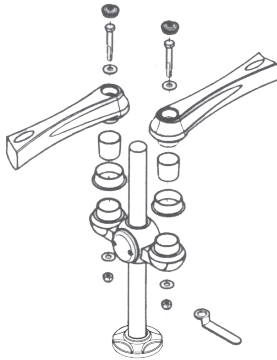

STEP 6


Place joint arm (with monitor attached) on the pole. Use the lever to tighten, or secure with supplied screw. Repeat Step 4, 5, 6 for the second LA-515 double connector. Insert pole cap onto pole.

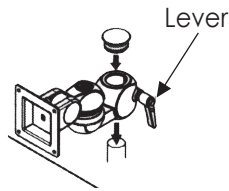

STEP 7

Adjusting Swivel Tension

Use the wrench to tighten or loosen the arm. Screw on the cable holders.

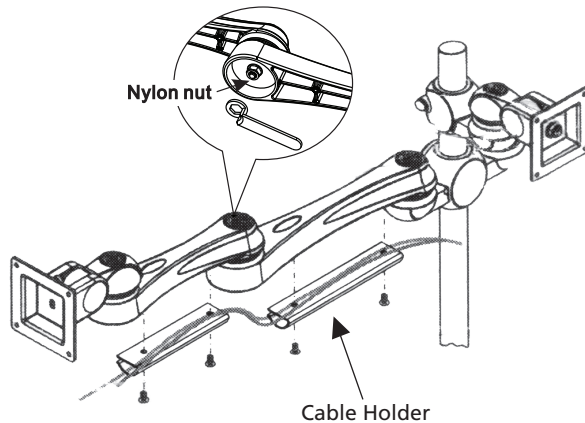


Assembly Guide

STEP 8

Adjusting Vesa Tension

When assembling the arm with monitors of differing weights, you may find that the tension of the vesa needs to be adjusted to maintain the desired monitor position. If so, adjust as follows:

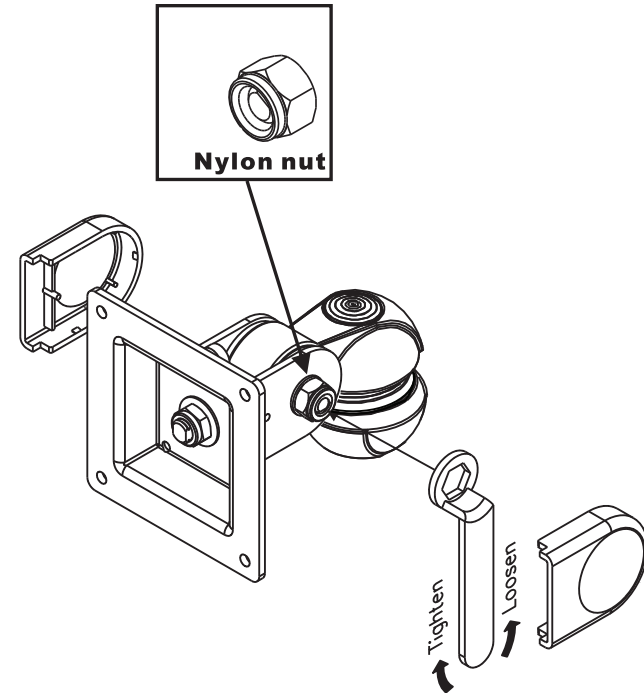

- Remove the two plastic vesa joint covers
- Find the nylon nut (not the screw head) and use the included wrench to adjust the tension.
- Use one hand to support the monitor and adjust the tension of the vesa.
 - Clockwise: more tension
 - Counterclockwise: less tension
- When the desired tension is achieved, replace the two plastic covers.

Caution:

- Support the monitor during the adjustment procedure.
- Only adjust the nylon nut (not the screw head).
- Do not disassemble the vesa.